POT★BELLY
BLINDS

★ POT-BELLY / DOUBLE-BELLY BLIND SHOOTER SHELF ASSEMBLY INSTRUCTIONS ★



NEED HELP? GIVE US A CALL: 256-815-1820

POT★BELLY
BLINDS

★ POT-BELLY / DOUBLE-BELLY BLIND SHOOTER SHELF ASSEMBLY INSTRUCTIONS ★

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START

Two people are helpful. Install the shelves after the blind walls are fully assembled and tightened.
The three shelves form one continuous shooting rail: left shelf — center shelf — right shelf.

SAFETY FIRST

- Do not stand on the shelves. They are a rest for a firearm, not a step.
- The side shelves fit very tight against the center shelf. Do not force them with a hammer. Use a screwdriver as an alignment pin.

TOOLS


TOOLS:	USE:
• Tapered punch or screwdriver	• Align the outside wall hole with the clip nut on the shelf
• Wrench or socket for the supplied shelf bolts (typically 9/16″)	• Wall bolts and underside corner bolts
• Second Person	• Hold each shelf while the first bolts are started

1. INSTALL THE CENTER SHELF

1. Stand inside the blind. Hold the center shelf on the wall directly across from the door, centered in front of that window.
2. From outside the blind, insert two bolts through the wall holes and into the clip nuts on the back of each shelf.

Start every bolt — DO NOT TIGHTEN.

- **The helper should keep the shelf level and at window-sill height while the bolts are started.**

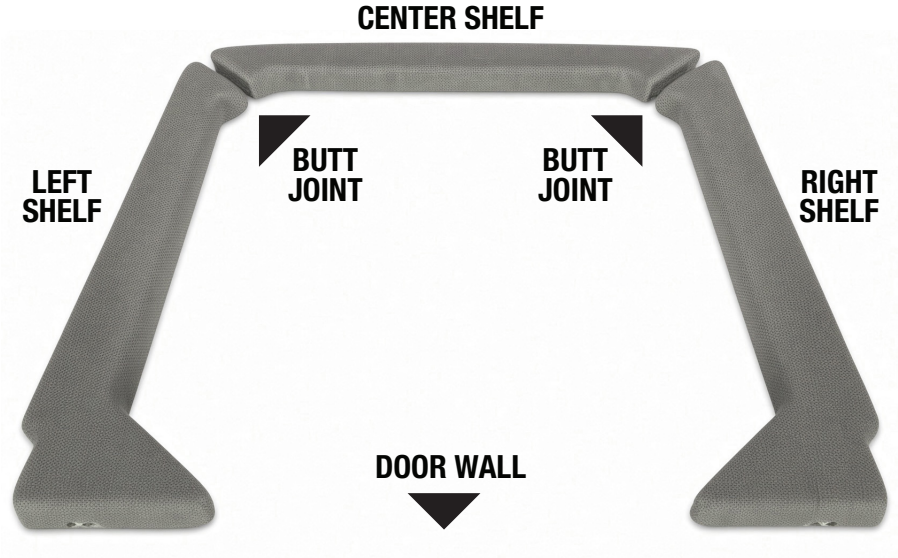


2. INSTALL THE FIRST SIDE SHELF

1. Take one remaining shelf (left or right). Butt its matching end tight against the already-installed center shelf.
2. These joints fit very tight. Expect to work the shelf into place.
3. From outside the blind, start the wall bolts into the side shelf.

Start every bolt — DO NOT TIGHTEN.

- **If the wall holes and clip nuts will not line up, push a small screwdriver through the outside wall bolt hole and into the clip nut on the shelf. Use it as an alignment pin, then start the bolts.**

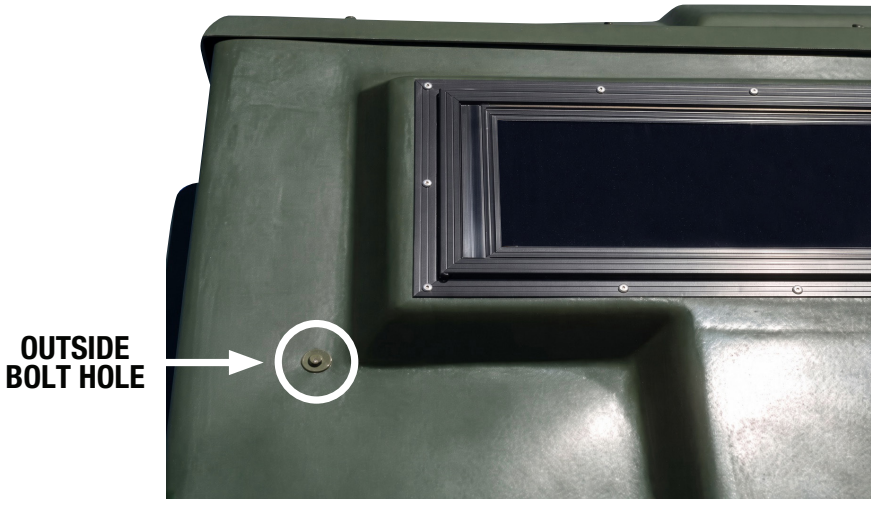

3. INSTALL THE REMAINING SIDE SHELF

1. Repeat Step 2 for the last shelf on the opposite side.

- **You should now have all three shelves standing, butted together, with every wall bolt started and still loose.**



4. BOLT THE THREE SHELVES TOGETHER

1. Under the shelves, at both corners where the three shelves meet, install the two additional bolts that lock all three shelves to each other.

Start both underside bolts — DO NOT TIGHTEN.



5. SET THE HEIGHT, THEN TIGHTEN

1. Look down the line of shelves:

- **Tops must be flush with the bottom of the window openings, or just below them. The three shelves must sit in one even plane — no high or low corner.**

2. Adjust while the bolts are still loose.
3. When the line is true, tighten the two underside corner bolts.
4. Tighten all wall bolts, working from the center shelf out to each side.



INSTALLATION IS COMPLETE WHEN THE THREE SHELVES FORM ONE CONTINUOUS RAIL, THE JOINTS ARE TIGHT AND FLUSH, THE TOPS SIT AT THE BOTTOM OF THE WINDOWS, AND EVERY BOLT IS TIGHT.

